COOPER Bussmann™

AUXILIARY CONTACT FOR 16A TO 100A COMPACT UL98/508 NON FUSIBLE DISCONNECT SWITCHES

Instruction sheet
Notice d'utilisation
Instrucciones de servicio

541571A

2 NO (F) Max: 2 blocks
1 NO (F) + 1 NC (O) Maxi : 2 CA

Dual dimensions in/mm
Double dimensions in/mm
Doble dimensions in/mm

IS 3A2006
RD16-3-508
RD25-3-508
RD40-3-508
RD60-3-508
RD80-3-508
IS 3A2011
RD30-3
RD60-3
RD100-3

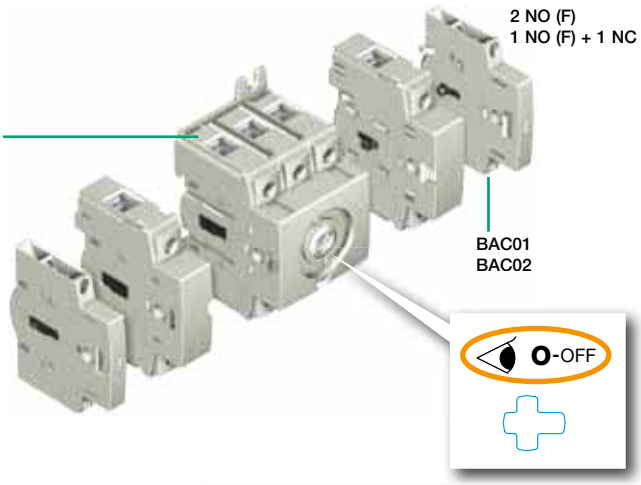

UL – CSA products

SWITCH	USED WITH	AUX. CONTACT
RD16-3-508 RD25-3-508 RD40-3-508 RD60-3-508 RD80-3-508 RD30-3 RD60-3 RD100-3	}	BAC01 BAC02

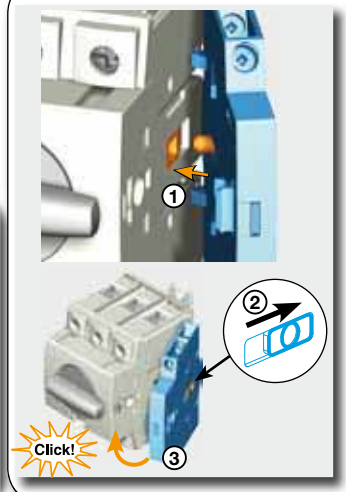

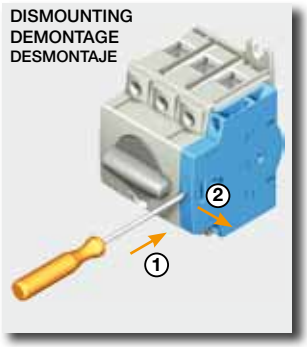

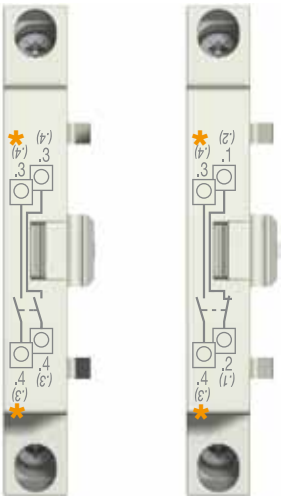

BAC02
2 NO
* PRE-BREAK

BAC01
NO + NC
Type Za
Same polarity

Use copper conductors only, 75°C or higher.
1 x 0,22 mm²
22 -14 AWG
2 x 2,5 mm²
2x22 - 2x14 AWG
0.23 in / 6 mm Stripping distance.
Flat 5,5
pozidriv 1
7.1 lb-in (8.8 lb.in Max)
0.8 Nm (1 Nm Max)

CONFIGURATION

Max : 2 blocks / Maxi : 2 CA

: PRE-BREAK : NO PRE-BREAK

UL508 16A to 80A

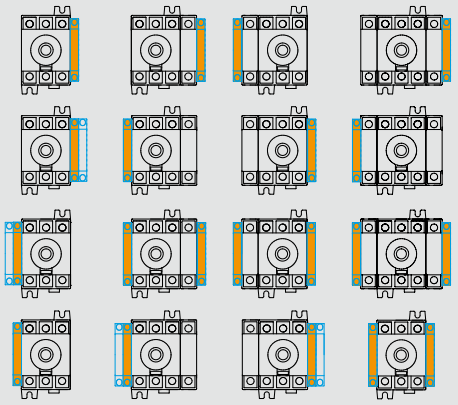

UL98 30A to 100A

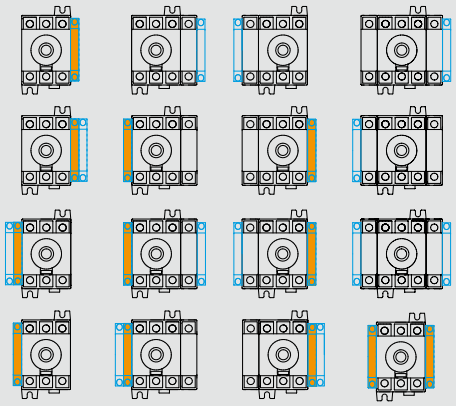

Size of end use enclosure : See Instruction Sheet of switches

⚠ DANGER

HAZARDOUS VOLTAGE. This equipment must be installed and serviced only by qualified electrical personnel. Turn off all power supplying this equipment before working on or inside equipment. Always use a properly rated voltage sensing device to confirm power is OFF. Replace all devices, doors, and covers before turning on power to this equipment. **Failure to follow these instructions will result in death or serious injury.**

TENSION DANGEREUSE. L'installation et l'entretien de cet appareil ne doivent être effectués que par du personnel qualifié.Coupez l'alimentation de cet appareil avant d'y travailler.Utilisez toujours un dispositif de détection de tension à valeur nominale approprié pour confirmer que toute alimentation est coupée.Replacez tous les dispositifs, les portes etles couvercles avant de mettre cet appareil sous tension. **Si ces précautions ne sont pas respectées, cela entraînera la mort ou des blessures graves.**

TENSION PELIGROSA. Solamente el personal de mantenimiento eléctrico especializado deberá instalar y prestar servicios de mantenimiento a este equipo. Desenergice el equipo antes de realizar cualquier trabajo en él. Siempre utilice un dispositivo detector de tensión adecuado para confirmar la desenergización del equipo. Vuelva a colocar todos los dispositivos,las puertas y las cubiertas antes de energizar este equipo. **El incumplimiento de estas precauciones podrá causar la muerte o lesiones serias.**

RECTO / S blanc offset quadri 80g/m² / 2 plis roulés / 2 plis croisés. Plié 70x75 mm

Edition 02/13 - 3A2008 - IS 541571-A (533749-I)

COOPER Bussmann
www.cooperbussmann.com